30" Speed Combination Oven

Benchmark® Series - Stainless Steel HBLP752UC





HBLP752UC Stainless Steel

The Bosch speed combination oven allows for faster cooking results and features a QuietClose® door.

Features & Benefits

Cooks Faster than a traditional oven and can be used as a microwave.

Dampened hinges softly and quietly guide the QuietClose® door shut.

The color TFT control panel with SteelTouch® buttons is easy to use.

A full-extension telescopic rack offers safe access to the oven cavity.

The wall oven is designed to be installed flush with cabinetry.

General Properties		
Cooking modes – upper cavity	Speed oven; TFT display, 12 Auto Programs (including Auto Defrost, Melt Butter, Soften Ice Cream, Pizza), 9 Sensor Cook Programs, 9 SpeedChef® Programs, Hi & Lo Broil, European Convection, Keep Warm, Frozen Foods	
Cooking modes – lower cavity	Bake, Variable Broil (hi & low), Roast, Warm, Sabbath, Proof Dough, Convection Bake, Convection Broil, Convection Roast, Pizza, Multi Rack Genuine European Convection, Convection Conversion, AutoProbe, Fast Preheat, EcoChef, Speed Convection (Frozen Foods)	
Cleaning type – lower		Self Clean

1

Telescopic rack

Illumination type	Halogen (Upper and Lower)		
Interior lights	1 Upper / 2 Lower		
Oven Performance			
Microwave power – upper cavity	1000 W		
Bake / broil element wattages – upper cavity	600 / 1,750 W		
Convection element wattages – upper cavity	1,700 W		
Bake / broil element wattages – lower cavity	2,400 / 3,800 W		
Convection element wattages – lower cavity	1700 W / 2000 W		
Technical Details			
Watts (W)	9,600 W		
Circuit breaker (A)	40 A		
Volts (V); Frequency (Hz)	240 / 208 V; 60 Hz		
Power cord length (in)	50"		
Plug type	Fixed Connection, No Plug		
Energy source	Electric		

Dimensions & Weight		
Overall appliance dimensions (HxWxD)(in)	49" x 29 3/4" x 24 1/2"	
Required cutout size - Standard (HxWxD) (in)	48 5/8" x 28 1/2" x 23 1/2"	
Required cutout size – Flush (HxWxD) (in)	49 1/8" x 30" x 24 1/2"	
Oven cavity size - upper	1.6 cu. ft.	
Overall upper oven interior dimensions (HxWxD) (in.)	9 7/8" x 16 1/2" x 16 1/2"	
Turntable – Metal Max. Cookware – upper	12 3/4" dia.	
Turntable – Ceramic Max. Cookware – upper	12 1/2" dia.	
Rack – Rectangular Cookware Max. – upper	15" x 12"	
Oven cavity size – lower	4.6 cu. ft.	
Overall lower oven interior dimensions (HxWxD) (in)	17 13/16" x 24 1/8" x 18"	
Usable lower oven interior dimensions (HxWxD) (in)	12 5/16" x 23 1/4" x 15 1/4"	
Net weight (lbs)	259 lbs	
Accessories-Included		

Accessories—Included

Upper Oven: Metal Turntable, Square rack,

Ceramic Cooking Tray

Lower Oven: 1 Telescopic and 2 Standard Oven Racks, Temperature Probe, Broiler Pan

Accessories-Optional



30" Telescopic Rack




Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST). Sat 6 am to 3 pm PST). Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.


30" Speed Combination Oven

Benchmark® Series - Stainless Steel HBLP752UC



Installation Details

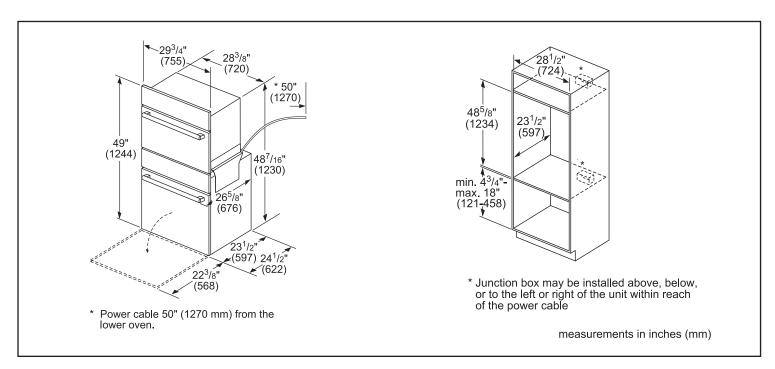

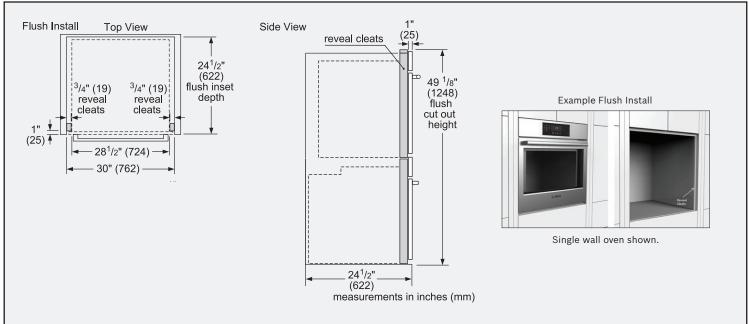

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.


Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.

30" Speed Combination Oven


Benchmark® Series - Stainless Steel HBLP752UC



Installation Details

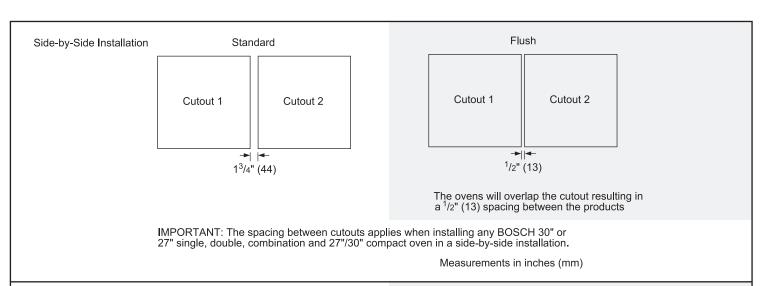


Standard Installation Combination Oven over Storage or Warming Drawer

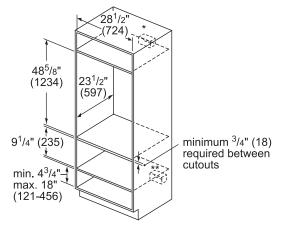

- *Wall oven junction box may be located above or right or left of the unit within reach of the power conduit.
- **Electrical hook up may be located below (depending on space) or next to the drawer within the reach of the power cord.

Measurements in inches (mm)

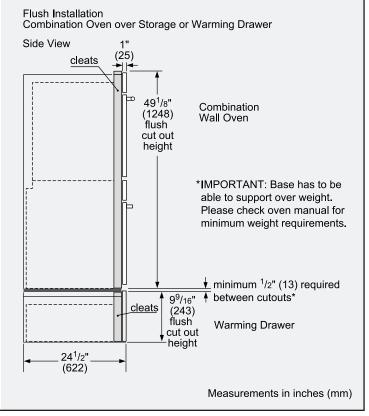

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.

Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.